

All Occasions Party Rentals, Inc.

From Moments to Milestones ... We Rent for Your Event!

1936 Windsor Road, Kelowna BC V1Y 4R5

Phone: 250-763-8687 Fax: 250-763-9945

On the web: www.alloccasionspartyrent.com

Email: alloccasions@telus.net

Propane Range Lighting Instructions

Because the range is run on propane, it is approved for outdoor use only. Do not use inside or in enclosed spaces unless you have contacted the appropriate authorities to ensure installation is done completely to safety code.

Fire extinguishers are typically required by the fire marshal and are available for rent.

1. Position range on a flat, non-combustible surface and lock the wheels. Connect propane and position tank in a safe place as far away from the range as safely possible.

2. When you are ready to light the range, open the valve on the propane tank.

3. To light the stove top:

Make sure all control knobs are in the off position, then light all burner pilot lights on the stove top individually. Adjust temperature as needed.

4. To light the oven:

Open the oven door on the front of the range, push and hold the red button and light the pilot light, which is located behind the steel shield to the left of the red button (apprx. 6" back, follow the copper supply line to locate it.) Use a fireplace match or igniter to light it. Once the pilot is lit,

keep the red button depressed for 30 seconds. Once lit, the oven is ready to operate.