

ALL OCCASIONS

PARTY & EVENT RENTALS

PROPANE RANGE INSTRUCTIONS

Position the range on a flat, non-combustible surface and lock the wheels. Connect the propane and position the tank in a safe place as far away from the range as possible. When you are ready to light the range, open the valve on the propane tank.

To light stove top first:

MAKE SURE ALL CONTROL KNOBS ARE IN THE OFF POSITION BEFORE LIGHTING THE STOVE. Light all the burner pilot lights on the stove top individually and adjust the temperature as required.

To light oven next if required:

Open hinged cover on the front of the range, depress red button and light pilot light which is located behind the steel shield to the left of the red button (Approximately 6" back, follow the copper supply line to locate it, fork shaped output). Use a fireplace match or igniter to light. Once pilot light is lit, keep button depressed for 30 seconds. Once lit, the oven is ready to operate.

Always use the utmost care when operating the range. Keep small children away from the unit. Propane appliances are for outside use only. If this unit is to be used inside, contact the nearest gas safety branch and ensure installation is done completely to code.

Fire extinguishers are typically required by the fire marshal and are available for rental.